

# Digital Remote TV Codes

You can program your remote to control the power, volume up and down, and mute functions on your TV. Use the following procedures to properly program your remote for optimal TV operation.

Make sure your TV is powered ON before you program the remote control.

1. Locate the proper TV brand with correlating codes from the [TV Setup Codes](#) list.
2. Point the remote control away from the digital home communications terminal and away from your TV and VCR.
3. Press and hold the **TV** button and the **Select** button at the same time until the red LED on the remote blinks twice.
4. Using the remote control keypad, enter your television's 3 or 4 digit setup code. The red LED on the remote should blink twice. If not, try another setup code, if available.
5. Confirm by pointing the remote control toward the TV and test the Power, Volume, and Mute functions. If these functions do not operate properly from the remote control, enter the next TV setup code in the list by repeating this procedure from Step 1.

**Note:** *If you want the remote control to adjust the volume on your digital home communications terminal rather than the volume on your TV, remember to press the **CBL** button before adjusting the volume, and if you want the remote control to adjust the volume on your TV press the **TV** button.*

## TV Setup Codes

TV Brand	Code
Admiral	107, 477
Adventura	060
Aiko	106
Akai	044
Alaron	193
Ambassador	191
American Action	194
Ampro	765
Anam	194
AOC	033, 044
Audiovox	106, 194, 465, 637
Baysonic	194
Belcor	033
Bell & Howell	030, 168
Bradford	194
Brockwood	033
Brocksonic	250, 477
Candle	044, 070

Carnivale	044
Carver	068
Celebrity	014
Cineral	106, 465
Citizen	044, 053, 070, 074, 106
Concerto	070
Contec	194
Craig	194
Crosley	068
Crown	053, 194
Curtis Mathes	030, 044, 053, 061, 065, 068, 070, 074, 107, 159, 168, 180, 465
CXC	194
Daewoo	033, 053, 106, 465, 637, 638
Daytron	033
Denon	159
Dumont	031, 033
Dwin	734, 788
Electroband	014
Emerson	033, 053, 168, 191, 192, 193, 194, 250, 477, 637, 638
Envision	044
Fisher	168
Fujitsu	193
Funai	185, 193, 194
Futuretech	194
GE	035, 061 065, 107, 149, 192, 296, 465
Gilbrater	031, 033, 044
GoldStar	033, 044, 070,0192
Gradiente	067, 070
Grunpy	193, 194
Hallmark	192
Harley Davidson	193
Harmon/Kardon	068
Harvard	194
Hitachi	070, 159, 065
Infinity	068
Inteq	031
JBL	068
JCB	014
JVC	067
KEC	194
Kenwood	033, 044

KTV	044, 053, 194
LG	070
Logik	030
Luxman	070
LXI	061, 068, 168, 170, 192
Magnavox	044, 068, 193
Majestic	030
Marantz	044, 068
Matsushita	264
Megatron	159, 192
Memorex	030, 070, 164, 168, 192, 264
MGA	033, 044, 164, 192
Midland	031, 053, 061, 065, 149
Minutz	035
Mitsubishi	033, 107, 164, 192
Motorola	107
MTC	033, 044, 164, 192
Multitech	194
NAD	170, 180, 192
NEC	033, 044, 070
Nikko	044, 106, 192
NTC	106
Onwa	194
Optimus	168, 180, 264
Optonica	107, 179
Orion	193, 250, 477
Panasonic	065, 264
Penney	033, 035, 044, 053, 061, 065, 070, 074, 149, 170, 192
Philco	033, 044, 068, 159, 477
Philips	068
Pilot	033, 044, 053
Pioneer	180
Portland	033, 053, 106
Prism	065
Proscan	061
Proton	192, 480
Pulsar	031, 033
Quasar	065, 179, 264
RCA	033, 061, 065, 104, 107, 149
Radio Shack	033, 044, 053, 061, 070, 168, 179, 192, 194
Realistic	033, 044, 053, 070, 168, 179, 192, 194
Runco	031, 044, 617

Sampo	044, 053
Samsung	033, 044, 070, 074, 192
Samsux	053
Sansei	465
Sansui	477
Sanyo	168
Scimitsu	033
Scotch	192
Scott	033, 192, 193, 194, 250
Sears	061, 068, 070, 168, 170, 185, 192, 193
Semivox	194
Semp	170
Sharp	053, 107, 179
Shogun	033
Signature	030
Sony	014
Soundesign	192, 193, 194
Squareview	185
Starlite	194
SSS	033, 194
Supreme	014
Sylvania	044, 068
Symphonic	185
Tandy	107
Tatung	069
Technics	065, 264
Technol Ace	193
Techwood	065, 070
Teknika	030, 033, 053, 068, 070, 074, 106, 164, 193, 194
Telefunken	070
TMK	070, 191, 192
Toshiba	074, 168, 170
Totevision	053
Vector Research	044
Victor	067
Vidikron	068
Vidtech	030, 192
Wards	030, 033, 035, 044, 068, 070, 179, 192, 193
White Westinghouse	637, 638
Yamaha	033, 044
Zenith	030, 031, 106