

## Searching for Your Code

### Searching for Your Code

If your home entertainment device does not respond to the Cox DVR Remote Control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

To search for a code for your TV, complete the following steps:

1. Turn on your TV.
2. On the remote control, press **TV** once; it will blink once. Then press and hold **SETUP** until the **TV** button blinks twice, then release **SETUP**.
3. Enter **9 - 9 - 1**. The **TV** button will blink twice.
4. Aim the remote control at the TV and slowly alternate between pressing **PWR** and **TV**. Stop when the TV turns off.

*NOTE: In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.*

5. Press **SETUP** once to lock in the code. The **TV** button will blink twice.
6. To search for the codes of your other devices, repeat steps 1 through 5, but substitute the appropriate button (e.g., **AUX**, **DVD**, **AUD**, or **CBL**) for the device you are searching for.

### Checking the Codes

If you have set up the Cox DVR Remote Control using the *Searching For Your Code* procedure, you may need to find out which four-digit code is operating your equipment.

To find out which code is operating your TV, complete the following steps:

1. On the remote control, press **TV** once; it will blink once. Then press and hold **SETUP** until the **TV** button blinks twice, then release **SETUP**.
2. Enter **9 - 9 - 0**. The **TV** button will blink twice.
3. To view the code for the first digit, press **1** once. Wait 3 seconds and count the number of times the **TV** button blinks (e.g., 3 blinks = 3) and write down the number for future reference.

*NOTE: If a code digit is "0", the selected mode button will not blink.*

4. Repeat step 3 three more times for the remaining digits. Use **2** for the second digit, **3** for the third digit, and **4** for the fourth digit. Finish writing down your 4-digit code for future reference.
5. To check for other device codes, repeat steps 1 through 4, but substitute the appropriate button (e.g., **AUX**, **DVD**, **AUD**, or **CBL**) for the device you are checking. Write down the codes for future reference.

