 



1

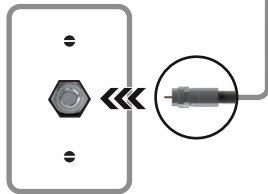

CONNECT COAX CABLE

Connect the **COAX CABLE** to the cable outlet on the wall and the other end into "Cable from Wall" port on the Contour box.

 
2

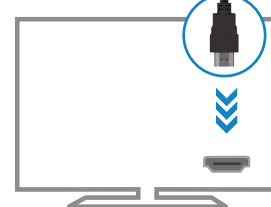

CONNECT HDMI CABLE

Connect the **HDMI CABLE** to the HDMI port on your TV, and the other end into the "HD to TV" port on the Contour Box.

3

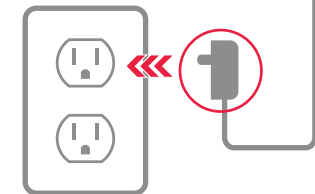

CONNECT POWER CABLE LAST

Connect the **POWER CORD** to the power outlet on the wall and the other end into the "Power" port on the Contour Box.

4

FINISH ACTIVATING YOUR CONTOUR BOX

When the light on your Contour box is solid, call **1-844-208-3743** to finish your activation.

Not seeing a picture? Ensure the TV's "Input" or "Source" is set to the same HDMI connection that was used in Step 2. For example, HDMI 1 or HDMI 2.

5

PROGRAM YOUR REMOTE

Press and hold the mute and select buttons until one of the top buttons (cable, TV, AUX, or DVD) blinks twice. Then release both buttons.

Press and release the TV button. Then press and hold the select button until the TV turns off. Once it turns off you're done. Learn more at **Cox.com/remote-help**.

6

HAVE QUESTIONS ABOUT YOUR INSTALLATION?

To learn more about Cox Service, visit us online or call. See your local channel lineup on **CoxBusiness.com/lineup**.



Coxbusiness.com/selfinstall



1-844-208-3743

