

The Cox HomelifeSM Continuous Video Recording feature lets you capture continuously recorded video on one or two cameras, 24 hours a day, and keeps recordings from the most recent 10 days. So if you go on vacation for a week, you won't miss a thing.

The screenshot shows a video player interface with a central video feed of a girl and a dog in a living room. To the left of the video feed is a control panel with the following elements:

- Main Menu:** A hamburger menu icon at the top left.
- Adjust playback speed:** A section with buttons for 1x (highlighted), 2x, 4x, and 8x.
- Expand or contract timeline view (from minutes to days):** A section with two arrows pointing left and right.
- Go back 24 hours:** A double left arrow icon.

Below the video feed is a timeline bar with the following features:

- Adjust timeline by dragging it right or left:** A callout pointing to the timeline bar.
- Click on motion icon to see events:** A callout pointing to a small icon on the timeline.
- Timeline marker:** A callout pointing to a vertical line on the timeline.
- Hover your mouse over the video and click to pause or play:** A callout pointing to a play/pause button overlaid on the video.

MAIN MENU	
Cameras	Select the camera you would like to view/manage, or turn the recording function on or off for each supported camera. You can record simultaneously on up to two cameras.
Go To Date/Time	Select the desired date and time for the recording you would like to view.
Make Clip	Create and save a 60-second or 5-minute clip in the cloud.
Saved Clips	View your saved video clips and clip usage quota, and download or delete saved clips.
Show Motion	Show or hide motion icons on the timeline, which allow you to easily jump to an identified motion event.