COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

DOOR AND WINDOW SENSOR



- 1 Find the locking mechanism tab located on the narrow side of the sensor with the LED light pointing towards it.
- 2 Press the locking mechanism using a flathead screwdriver until the back cover pops off.
- 3 Remove the old battery and dispose of it properly.
- 4 Insert one new CR2 Battery.
- 5 Replace the cover by sliding the locking tab back into place.

Protect. Monitor. Control.