

COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

DOOR AND WINDOW SENSOR



Sercomm Brand



CR2032 Battery (1)

- 1 Find the notch on the shorter side of the sensor.
- 2 Using your finger, pry the cover from the base.
- 3 Remove the old battery and dispose of it properly.
- 4 Insert one new CR2032 battery, observing proper polarity.
Note: + should be facing you
- 5 Push the cover back on the sensor until it clicks into place.