

# COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

## DOOR AND WINDOW SENSOR

 The image shows two white plastic components of a door and window sensor. On the left is a larger rectangular cover with a red indicator light on its front face. On the right is a smaller, thinner rectangular base with a mounting tab on its top edge.	 A single CR2 battery is shown. It has a black body with 'CR2' printed vertically in white. The top is a copper-colored cap with a '+' sign and a small black triangle pointing upwards.
<p><b>Visonic Brand (Auxiliary)</b></p>	<p><b>CR2 Battery (1)</b></p>

- 1 Remove the cover-securing screw with a Phillips screwdriver and set it aside.
- 2 Pry the base from the cover and set it aside.
- 3 Insert one new CR2 battery, observing proper polarity.
- 4 Replace the cover, ensuring the tabs on the cover line up with the slots on the base.
- 5 Close the sensor and replace the screw.

**COX** Homelife<sup>SM</sup>

Protect. Monitor. Control.