

COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

MOTION SENSOR



SMC Brand



CR123A Battery (3)

- 1 Loosen the screw at the bottom of the sensor with a Phillips screwdriver.
- 2 Insert a flathead screwdriver under the cover by the screw and twist to remove. Set the cover aside.
- 3 Remove the old batteries and dispose of them properly.
- 4 Insert three new CR123A batteries.
- 5 Slip the back cover back on until you hear it snap into place.
- 6 Tighten the screw.

COX HomelifeSM

Protect. Monitor. Control.