

COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

MOTION SENSOR

	
Visonic Brand	CR123A Battery (1)

- 1 Loosen the bottom screw on the motion sensor with a Phillips screwdriver until the cover pops off.
- 2 A green board is held in at the top by a catch tab. Gently pull this tab up and remove the board from the case by pulling the section closest to the catch tab first.
- 3 Gently remove the board from the sensor and set it aside.
- 4 Remove the old battery and dispose of it properly.
- 5 Insert one new CR123A battery.
- 6 Reinsert the board and remove the board from the case by pulling the section closest to the catch tab first.
- 7 Lean the board forward until the tab clicks into place.
- 8 Reconnect the base and cover, and tighten the screw.

COX HomelifeSM

Protect. Monitor. Control.