

COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

SMOKE DETECTOR

| | |
|---|--|
|  |  |
| SMC Brand | CR123A Battery (2) |

- 1 Remove the smoke detector from the mounting base by turning the cover counterclockwise approximately 15 degrees.
- 2 Slide the battery compartment cover away from the smoke detector to unsnap it and lift it off.
- 3 Remove the old batteries by pulling on the cloth tab, and dispose of them properly.
- 4 Observing correct polarity, insert two new CR123A batteries into the battery compartment and replace the cover, making sure the tab aligns with the arrow on the base.
- 5 Reattach the cover to the mounting base and test the system by pressing the test button.

COX HomelifeSM

Protect. Monitor. Control.