

COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

SMOKE DETECTOR

	
Visonic Brand	CR123A Battery (1)

- 1 Separate the detector from its bracket by rotating the detector counterclockwise and pull it from the bracket.
- 2 Lift battery cover.
- 3 Remove the old battery and dispose of it properly.
- 4 Observing proper polarity, insert one new CR123A battery.
Note: When the battery first makes contact, the alarm horn may sound for one second. This indicates that the battery is connected properly.
- 5 Replace the cover by gently snapping it into place, and then press the test button to ensure proper installation.

COX HomelifeSM

Protect. Monitor. Control.