## COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

## WATER SENSOR





## Visonic Brand



- Remove the cover-securing screw with a Phillips screwdriver and set it aside.
- 2
- Pry the base from the cover and set it aside.
- 3 Remove the old battery and dispose of it properly.
- 4 Insert one new CR2 battery, observing proper polarity.
- 5 Replace the cover, ensuring the tabs on the cover line up with the slots on the base.
- 6 Close the sensor and replace the screw.

