

# COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

## WIRELESS KEY FOB



Hitron Brand



CR2032 Battery (1)

- 1 Slide the battery cover to the left to open as shown.



- 2 Remove the old battery and dispose of it properly, and replace with one new CR2032 battery observing proper polarity.

**Note:** + should be facing you.

- 3 Slide the battery cover back and test operation.



COX Homelife<sup>SM</sup>

Protect. Monitor. Control.