

COX HOMELIFE DEVICES BATTERY REPLACEMENT INSTRUCTIONS

WIRELESS KEY FOB

	
SMC Brand	CR2032 Battery (1)

- 1 Place the head of a small flathead screwdriver between the front and back covers of the keychain remote and twist to separate the covers.
- 2 Lift the small circuit board that holds the disk battery from the keychain remote. Using the head of the screwdriver, push the disk battery out of its holster on the circuit board. Remove the old battery and dispose of it properly, as recommended by the battery manufacturer.
- 3 Insert one new CR2032 battery, observing proper polarity.
- 4 Place the circuit board back into the keychain remote.
- 5 Reconnect the front and back covers of the keychain remote and test operation.

COX HomelifeSM

Protect. Monitor. Control.