

# COX HOMELIFE<sup>SM</sup> DEVICES BATTERY REPLACEMENT INSTRUCTIONS

## MOTION SENSOR



BOSCH BRAND



CR123A BATTERY (2)

- 1 Using a small flathead screwdriver, turn the slotted switch at the base of the sensor a ½ turn counterclockwise.
- 2 Detach the cover from the base.
- 3 Using your finger, pull the battery compartment from the cover and replace the batteries, observing proper polarity.
- 4 Dispose of the old batteries properly.
- 5 Replace the self-locking cover back on to the base.

**COX** Homelife<sup>SM</sup>

Protect. Monitor. Control.