

LINKSYS®


AC1900 Wi-Fi CABLE MODEM ROUTER

CG7500


Quick Start Guide

Disconnect any modems or modem routers before setting up your new modem router.

 - 1 Connect a coaxial cable to the cable port on the modem router and a wall jack.

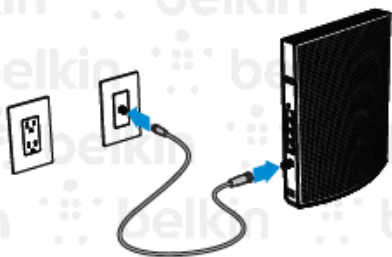

 - 2 Connect the provided power adapter to the modem router and plug into a power source.

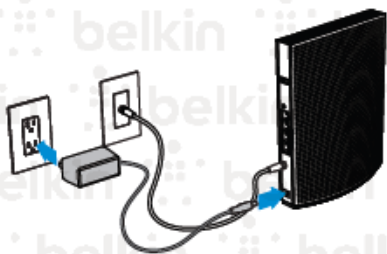


- 3 Connect to the secure Wi-Fi name on the sticker (You can change these details later). Select the option to automatically connect to this network in the future.
Note- You will not have internet access until you complete modem router setup.

Place sticker here

- 4 Open a web browser and type <http://192.168.1.1> in the address bar.



 
- 5 In the pop-up window, enter "admin" in the Password field. Click **Log In**. The web-based setup page of your modem router will appear.

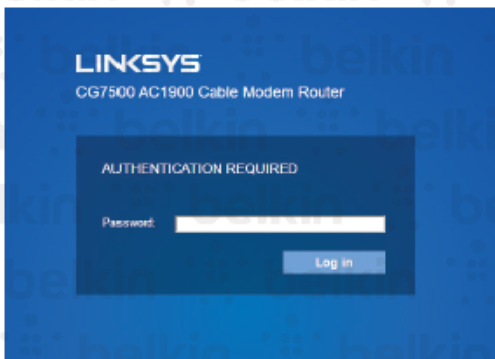

- 6 Make sure you are on the Quick Start tab. Click **Begin** to start the setup wizard



 - 7 When your modem router is ready, the top four lights (power, receive, send, status) will be solid

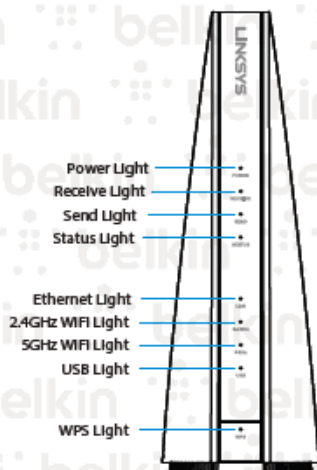

Advanced users can select "I want to skip the Setup and configure the modem router manually."



- If you choose to manually set up the modem router, you will need to have the following information available for activation:
 - o Account number of your broadband subscription
 - o Phone number linked with your account
 - o Serial number of the modem router (on the back of the unit)
 - o MAC address of the modem router (on the back of the unit)



To activate:

Open a web browser from a computer that's connected directly to the modem router. This is where you will need the information above (account number of your broadband service, phone number and new modem router device identifiers).

Some service providers have additional setup steps that will automatically appear in the browser - if not, visit the appropriate link below. Follow the steps for your internet provider or call them if you are unable to get online.

Note — The modem router may reboot several times during this process and activation can take up to five minutes.

After activation, you should be able to connect to the internet wirelessly via your modem router or a wired connection between your computer and the modem router.

Helpful links:

- <https://install.charter.com/>
- <https://activation.cox.net>
- www.xfinity.com/activate

AS YOU COMPLETE SETUP, RECORD YOUR ROUTER SETTINGS IN THE SPACES PROVIDED.

2.4 GHz Wi-Fi name (SSID)

2.4 GHz Wi-Fi password

5 GHz Wi-Fi name (SSID)

5 GHz Wi-Fi password

Modem Router password
(default is "admin")

PLACE MAC/SN STICKER HERE