

WELCOME TO WALL TO WALL FAST

EVERYTHING YOU NEED TO SET UP YOUR NEW WiFi MODEM

 


WHAT'S INSIDE


 PANORAMIC WiFi MODEM


 COAX CABLE


 POWER CORD


 ETHERNET CABLE

HOW TO ACTIVATE

1 PLACE YOUR WiFi MODEM

First, choose a central location near a cable outlet for your COX WiFi Modem, **then take note of your network name (SSID) and password** located on the bottom of your WiFi Modem.


NETWORK NAME (SSID): SETUP - XXXX
PASSWORD: XXXXXXXX

TIP Place your WiFi Modem at least 3 feet from the ground, avoiding cramped spaces or anything that may block your WiFi signal

2 PLUG IN COAX CABLE

Connect your coax cable to the **cable outlet**.

OPTIONAL for COX Voice customers - connect your telephone to the **TEL 1** connection on your WiFi Modem using a telephone cord (not included).

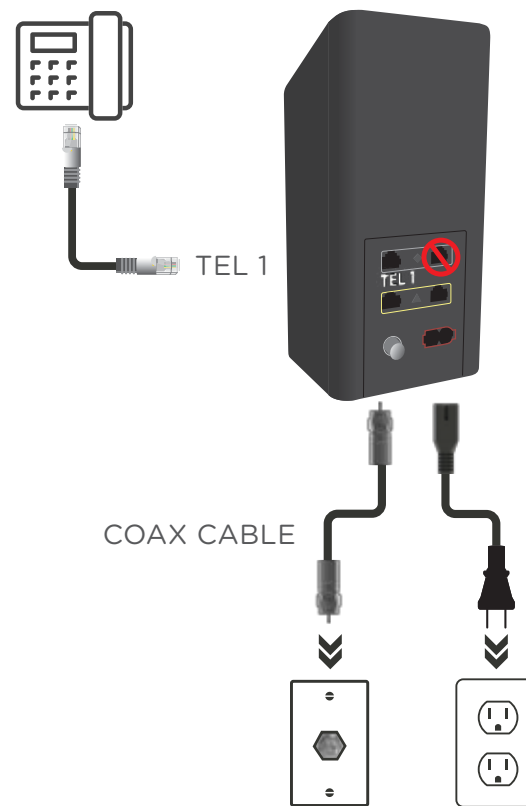

3 PLUG IN POWER CORD

Plug your power cord into an **electrical outlet** without a dimmer or wall switch.

4 CONNECT

Access the **WiFi settings** on your personal device. Then, select the Network Name (SSID) from your WiFi Modem noted in Step 1 and **connect using the password from Step 1**.

5 ACTIVATE

Once connected, follow the steps to set up your WiFi network. If not automatically directed to a setup screen, open a web browser and go to **cox.com/activate** and **follow the steps to set up your WiFi network**.

TIP If you have an existing network name and password, it may be helpful to use the same name and password to avoid updating multiple devices.

After setup is complete, you're ready to connect to your network. If you're using a Battery Backup and have questions, refer to **cox.com/battery**.

TROUBLESHOOTING If you have difficulty establishing a network connection - try to unplug the power cord, wait 30 seconds, plug in the power cord, and verify that you can connect to your new network. Learn more about optimizing your Internet speed at **cox.com/wifisupport**.

ANY QUESTIONS?  **1-888-556-1193**

520-2467

BIENVENIDO A LA VELOCIDAD DEL PISO AL TECHO

TODO LO QUE NECESITAS SABER PARA CONFIGURAR TU NUEVO MÓDEM WIFI

PANORAMIC WiFi™

520-2467

¿QUÉ HAY ADENTRO?

MÓDEM PANORAMIC WIFI

CABLE COAXIAL CABLE DE ELECTRICIDAD CABLE ETHERNET

¿CÓMO ACTIVAR?

1 ACOMODA TU MÓDEM WIFI

Primero, elige una ubicación central, cerca de una toma de cable para tu módem WiFi de Cox. Luego, **escribe el nombre de tu red (Network Name (SSID)) y la contraseña (password)**, localizados en la parte inferior de tu módem.

NOMBRE DE TU RED (SSID): SETUP - XXXX
CONTRASEÑA: XXXXXXX

SUGERENCIA Coloca tu módem al menos a 3 pies de altura del piso, evitando espacios estrechos o cualquier cosa que pueda bloquear tu señal WiFi

2 CONECTA EL CABLE COAXIAL

Conecta tu cable coaxial a la **toma de cable**.

OPCIONAL para clientes de Cox Voice - Conecta tu teléfono a la conexión **TEL 1** en tu módem de WiFi, usando un cable telefónico (no incluido).

TEL 1

CABLE COAXIAL CABLE DE ELECTRICIDAD

3 CONECTA EL CABLE DE ELECTRICIDAD

Conecta tu cable de electricidad a una **toma eléctrica** sin regulador de intensidad o interruptor de pared.

NOTA Tu módem WiFi puede tomar hasta 10 minutos para activarse - no lo desconectes. Espera hasta que la luz LED en tu módem WiFi permanezca sólida, sin parpadear, por 60 segundos. Entonces estarás listo para continuar.

4 CONECTA

Ingresas a la configuración de WiFi en tu equipo personal. Luego, selecciona el nombre de tu red (Network Name (SSID)) que anotaste de tu módem en el paso 1 y **conéctate** utilizando la contraseña (**password**) del paso 1.

5 ACTIVA

Una vez conectado, sigue los pasos para configurar tu red WiFi. Si no se dirige automáticamente a una pantalla de configuración, abre un navegador web y ve a **cox.com/activate** y **sigue los pasos para configurar tu red WiFi**.

SUGERENCIA Si ya tienes un nombre y una contraseña de red existentes, puede ser útil usar el mismo nombre y contraseña para evitar tener que actualizar varios equipos.

Una vez completada la configuración, estarás listo para conectarte a tu red. **OPCIONAL** para clientes de Cox Voice - Conecta tu teléfono a la conexión TEL 1 en tu módem de WiFi, usando un cable telefónico (no incluido).

SOLUCIÓN DE PROBLEMAS Si tienes dificultades para establecer una conexión de red, intenta desconectar el cable eléctrico, espera 30 segundos, conecta el cable de electricidad y verifica que si puedes conectarte a tu nueva red. Obtén más información sobre cómo optimizar la velocidad de tu Internet en cox.com/wifisupport.

¿TIENES PREGUNTAS? 1-888-556-1193

8 1/8

4 11/16 4 11/16 4 11/16 4 11/16 18 13/16

 veritivcorp.com	file name: 23658812_A01_K_Instructions_XB6.ai material: 100# Cover White Uncoated cad ref./scale: 100% print: as shown	inks & coatings: <table border="0"> <tr> <td></td> <td>Process Cyan</td> <td></td> <td>Process Yellow</td> </tr> <tr> <td></td> <td>Process Magenta</td> <td></td> <td>Process Black</td> </tr> </table>		Process Cyan		Process Yellow		Process Magenta		Process Black	customer: Cox Communications project name: XB6 Instructions customer part #: 520-2467
	Process Cyan		Process Yellow								
	Process Magenta		Process Black								
© 2015 veritiv corporation. all rights reserved. the designs, specifications, and other information contained in this document are veritiv confidential and proprietary information and intellectual property, and as such, may not be disclosed, reproduced, or utilized in any manner without the express prior written consent of veritiv.		important: this document does not represent final reproduction and is for content and placement reference only. it is the client's responsibility to check for any errors in spelling, punctuation, alignment and arrangement, that may have occurred during preparation. colors are computer simulated and are not for color matching. pantone® simulations used in this art may not match pantone-identified color standards. use current pantone color reference manuals for accurate color matching. designer: Melissa Payne (GA) sales rep: Jason Berman (CA) saved date: 5/17/2018									