

Simplicity®
Model RT-SR50
Universal Cable +TV Remote Control



© 2014, Contec, LLC, Rev. 11/14

Programming and Operating
Instructions

7. All Power

To program the [CBL POWER] button to turn your cable set-top terminal and TV on / off with one button press, follow these steps :

- 1.Press [CBL POWER], then [MENU] buttons together until the indicator light blinks two times.
- The [CBL POWER] button will now send the cable set-top power signal immediately followed by the TV power signal.

To return to default [CBL POWER] setting of sending only the cable set-top power signal, repeat steps 1 - 2 above.

8. Channel Control Options

- When you first program your remote control, it will control channels (0 - 9, CH ▲/▼, Last) through your Cable set-top terminal.
- If you don't have a Cable set-top terminal and wish to control channels (0 - 9, CH ▲/▼, Last) through your TV, follow these steps :
- 1.Press [CBL Power], then [MUTE] buttons together until the indicator light illuminates.
 - 2.Press [9, 9, 9]. Each time you enter a [9], the indicator light will blink green and remain illuminated.
 - 3.When you enter the 3rd digit [9], the indicator light will blink and go out.
- To return channel control to your Cable set-top terminal, follow these steps:
- 1.Press [CBL Power], then [MUTE] buttons together until the indicator light illuminates.
 - 2.Press [0, 0, 0]. Each time you enter a [0], the indicator light will blink red and remain illuminated.
 - 3.When you enter the 3rd digit [0], the indicator light will blink and go out.

9. Optional Cable Setting

- To limit the number of Cable set-top functions your Simplicity® remote operates to 0 - 9, Ch ▲/▼, Last and Fav, follow these steps :
- 1.Press [CBL Power], then [MUTE] buttons together until the indicator light illuminates.
 - 2.Press [8, 8, 8]. Each time you enter a [8], the indicator light will blink red

1. Introduction

Your Simplicity® remote control is simple to program, easy to use, and can operate two (2) devices, which include:

CABLE Cable set-top terminals
TV Televisions

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

Follow the instructions in Sections 3 and 4 below to program your Cable & TV devices.

2. Installing / Replacing Batteries

Install two (2) new “AA” batteries as indicated by the diagram in the battery compartment.

When the indicator light becomes dim or no longer illuminates during use, install two (2) new “AA” size batteries.

Your remote control has Memory Guard®, which eliminates reprogramming after battery changes.

3. Programming Your CABLE Set-Top Terminal

Your Simplicity® remote control supports the newest set-top terminals from your Cable TV provider, but may come pre-programmed to a specific brand.

To program your remote to operate your Cable set-top terminal, look up the brand and model in the Cable Setup Code list. If you are not sure of your brand and model, contact your Cable TV provider.

Programming your CABLE set top terminal

- 1.Press [SEL / OK], then [MUTE] buttons together until the indicator light illuminates.
 - 2.From the Cable Setup Code list, locate and enter the 4-digit code for your brand and model.
 - 3.Press [SEL / OK] to lock in code. The indicator light will blink and go out.
- Write your CABLE setup code _____.

10. Input

The [INPUT] button changes the input source of your electronic devices. In the remote's default (Cable mode) setting, this button changes the input source (Input 1, Input 2....) on your TV.

To program [INPUT] to operate the input function on your cable set-top terminal, follow these steps :

- 1.Press [INPUT], then [SEL / OK] buttons together until the indicator light illuminates.
 - 2.Press [CBL POWER]. The indicator light will blink and go out.
- To program [INPUT] to operate the input function on your TV, follow these steps :
- 1.Press [INPUT], then [SEL / OK] buttons together until the indicator light illuminates.
 - 2.Press [TV POWER]. The indicator light will blink and go out.

11. Code Number Readback

To identify the 4-digit TV setup code stored under the Point and Press® method....

- 1.Press [TV POWER], then [SEL / OK] buttons together until the indicator light illuminates.
- 2.Press [INFO] to identify your TV setup code. The indicator light will “blink back” the code numbers, with a 1-second interval between each digit of the code.

Example : For code “0035”, the indicator light will blink 6 times rapidly, 6

◆ Cable Setup Codes

Brand	Model	Code
Motorola	DCX	0002, 1002
	DCT	0002, 1002
	DTA	0002, 1002
Cisco	8xxx series	0412, 0413, 1413
	DTA	0002
Pace	DVR	0002
Panasonic	RNG	0002
MOXI	MC3, Alpha	0006
	MC1	0007
Evolution		0005
Cox	Mini box	0991

4. Programming Your TV

If you have a TV that's operated by remote control, it is recommended that you plug it directly into a wall outlet instead of the Cable set-top terminal.

Programming Your TV by Code Entry Method

- 1.Turn on the TV you want your remote to operate.
 - 2.Press [SEL / OK], then [MUTE] buttons together until the indicator light illuminates.
 - 3.a. Locate the 1st4-digit code for your brand in the TV Setup Code list and enter it on the keypad of the remote control.
- Entry of the correct TV code will cause your TV to turn off.
- If multiple codes are listed for your brand, you may have to enter several codes until your TV turns off.
- b.As soon as you enter a 4-digit code that turns your TV off, press [MUTE].
 1. If your TV turns back on, press [SEL / OK] to lock in the code. The indicator light will blink and go out.
 2. If your TV does not turn back on, enter a different 4-digit code until

times rapidly, then 3 times slowly, then 5 times slowly.

12. Resetting Your Remote Control

To reset your Simplicity® remote control to its default settings, follow these steps :

- 1.Press [CBL Power], then [SEL / OK] buttons together until the indicator light illuminates.
- 2.Press [1]. The indicator light will blink and go out.

13. VOD

The [VOD] button is pre-programmed to access your Cable provider's video-on-demand channel. It can also be programmed to store and transmit up to 5 channels.

To program the [VOD] button to store 5 channels (ex. 0001, 0012, 0123, 1234, 0017), follow these steps :

- 1.Press [VOD], then [CBL Power] buttons together until the indicator light illuminates.
- 2.Enter each channel (ex. assumes 4-digit channel format) :
 - a. Enter [0, 0, 0, 1].
 - b. Press [CH ▲] to advance to next channel # setting.
 - c. Enter [0, 0, 1, 2].
 - d. Press [CH ▲] to advance to next channel # setting.
 - e. Enter [0, 1, 2, 3].
 - f. Press [CH ▲] to advance to next channel # setting.
 - g. Enter [1, 2, 3, 4].
 - h. Press [CH ▲] to advance to next channel # setting.
 - i. Enter [0, 0, 1, 7].
- 3.Press [VOD] to store the above channels. The indicator light will blink and go out.

Once programmed, each time the [VOD] button is pressed, it will tune your Cable set-top terminal to the next stored channel. When the remote transmits the last stored channel, it will tune to the 1st stored channel.

To store fewer than 5 channels, you can press the [VOD] button any time

your TV turns back on. Then press [SEL / OK] to lock in the code.

The indicator light will blink and go out.

Programming Your TV by Point and Press® Method

- 1.Turn on the TV you want your remote to operate.
 - 2.Press [SEL / OK], then [MUTE] buttons together until the indicator light illuminates.
 - 3.Press [TV Power]. The LED will illuminate in green
 - 4.Press and hold the [CH ▲] button until your TV turns off. While you are pressing the [CH ▲] button, the indicator light will blink. As soon as your TV turns off, release [CH ▲].
 - 5.Press [MUTE]. If your TV...
 - a. Turns back on, press [SEL / OK] to lock in the code. The indicator light will blink and go out.
 - b.Does not turn back on, press [CH ▼] one step at a time until your TV turns back on. Each time you press the [CH ▼] button, the indicator light will blink.
- Once you have found a code that turns your TV on / off, press [SEL / OK] to lock in the code. The indicator light will blink and go out.
- Write your TV setup code _____.

5. TV Learning Feature

If you are unable to locate a setup code for your TV, you can program each TV key individually by “learning” from your OEM remote.

To program your TV by learning, follow these steps :

- 1.Press [TV POWER], then [RECORD] buttons together until the indicator light illuminates.
- 2.Position the Simplicity® remote and your TV OEM remote face-up on a flat surface about 1-2” apart so that their IR transmitters are facing one another.
- 3.Press [TV POWER] on your Simplicity® remote. The indicator light will blink and remain illuminated.
- 4.Press the “Power” key on your TV OEM remote. The indicator light on the

after entering a channel #.

To reset the [VOD] button to its pre-programmed default function, follow these steps:

- 1.Press [VOD], then [CBL Power] buttons together until the indicator light illuminates.
- 2.Press [VOD]. The indicator light will blink and go out.

14. Helpful Tips and Troubleshooting

- 1.Your remote has a Point and Press® Programming label on the back of its case. This will help you quickly program the remote without using codes.
 - 2.Your remote is equipped with an indicator light which will illuminate in green when the remote is operating a function on your TV and red when the remote is operating a function on your cable set-top terminal.
 - 3.The indicator light will remain illuminated while the remote is in a programming mode. In the absence of an entry, the indicator light will go out after 30-seconds.
 - 4.When locking in your devices, the indicator light will blink and go out.
 - 5.When using the Point and Press® programming method, you may find a code that turns your TV off but not back on. If this happens...
 - a. The correct code has not been found. Continue pressing [CH ▲] until your TV turns on and off.
 - OR
 - b.You may have gone past the correct matching code. Try pressing [CH ▼] one step at a time until you find a code that turns your TV on.
 - 6.Time Out - If the same button is pressed and held for 30-seconds, your remote control will turn itself off automatically.
- This extends battery life should the remote become lodged under or between heavy objects, for example sofa cushions.
- 7.If you have any questions concerning the operation of your Cable set-top terminal, contact your Cable operator.

- Simplicity® remote will blink once and remain illuminated.
- 5.Press the “Power” key on the OEM remote again. The indicator light on the Simplicity® remote will blink two times and remain illuminated.
 - 6.Repeat steps 3 - 5 for any additional TV keys you would like to learn.
 - 7.Press and hold [SEL / OK] for at least 3-seconds to lock in the learned TV data. The indicator light will blink and go out

To clear specific learned keys, follow these steps :

- 1.Press [TV POWER], then [EXIT] buttons together until the indicator light illuminates.
- 2.Press the learned TV key(s) you would like to clear.
- 3.Press and hold [SEL / OK] for at least 3-seconds. The indicator light will blink and go out. The selected keys are now cleared and will transmit the data respective to the most recent TV code programmed before the keys were learned.

To clear all learned keys, follow these steps :

- 1.Press [TV POWER], then [STOP] buttons together until the indicator light blinks and goes out. All learned keys are now cleared.

6. Volume Control

When you first program your remote, volume and mute are controlled through your TV.

To control volume / mute through your CABLE set-top terminal, follow these steps :

- 1.Press [CBL POWER], then [SEL / OK] buttons together until the indicator light illuminates.
- 2.Press [VOL ▲], then [CBL POWER] for CABLE volume. The indicator light will blink and go out.

To program volume control to your TV, follow these steps:

- 1.Press [CBL POWER], then [SEL / OK] buttons together until the indicator light illuminates.
- 2.Press [VOL ▲], then [TV] for TV volume. The indicator light will blink and go out.

Rev. 05/12

© 2012, Contec, LLC

U.S. Pat. # D641,735


Simplicity®, Point and Press® and Memory Guard® are registered trademarks of Contec, LLC

◆ TV Setup Codes

Brand	Code
Abex	0016
Acer	0454 0782
Admiral	0026 0027 0028 0029 0054 0211 0213 0408
Advent	0047 0072 0094 0425 0447 0463
Adventura	0047
Aiko	0015 0051 0391
Aiwa	0214 0471
Akai	0020 0031 0053 0462 0473 0522 0524 0547 0572
Alleron	0586
Amak	0211 0395
Ambassador	0023 0215
America Action	0159
Amstrad	0168
Amtron	0157
Anam	0168 0400
Anam International	0044 0168 0217 0218 0219 0220 0221 0222 0223
AOC	0400 0403
Apex	0403
Apex Digital	0053 0073 0108 0384 0455 0573 0587
Astar	0030 0038 0427 0462 0599
Audiovox	0866
Auria	0462
Baysonic	0168 0191 0220 0400 0465 0659
Belcor	0072
Bell & Howell	0168
	0073
	0211 0213 0355 0388 0736

15.Using Your Remote Control

The operation of each button on your Simplicity® remote control is as follows

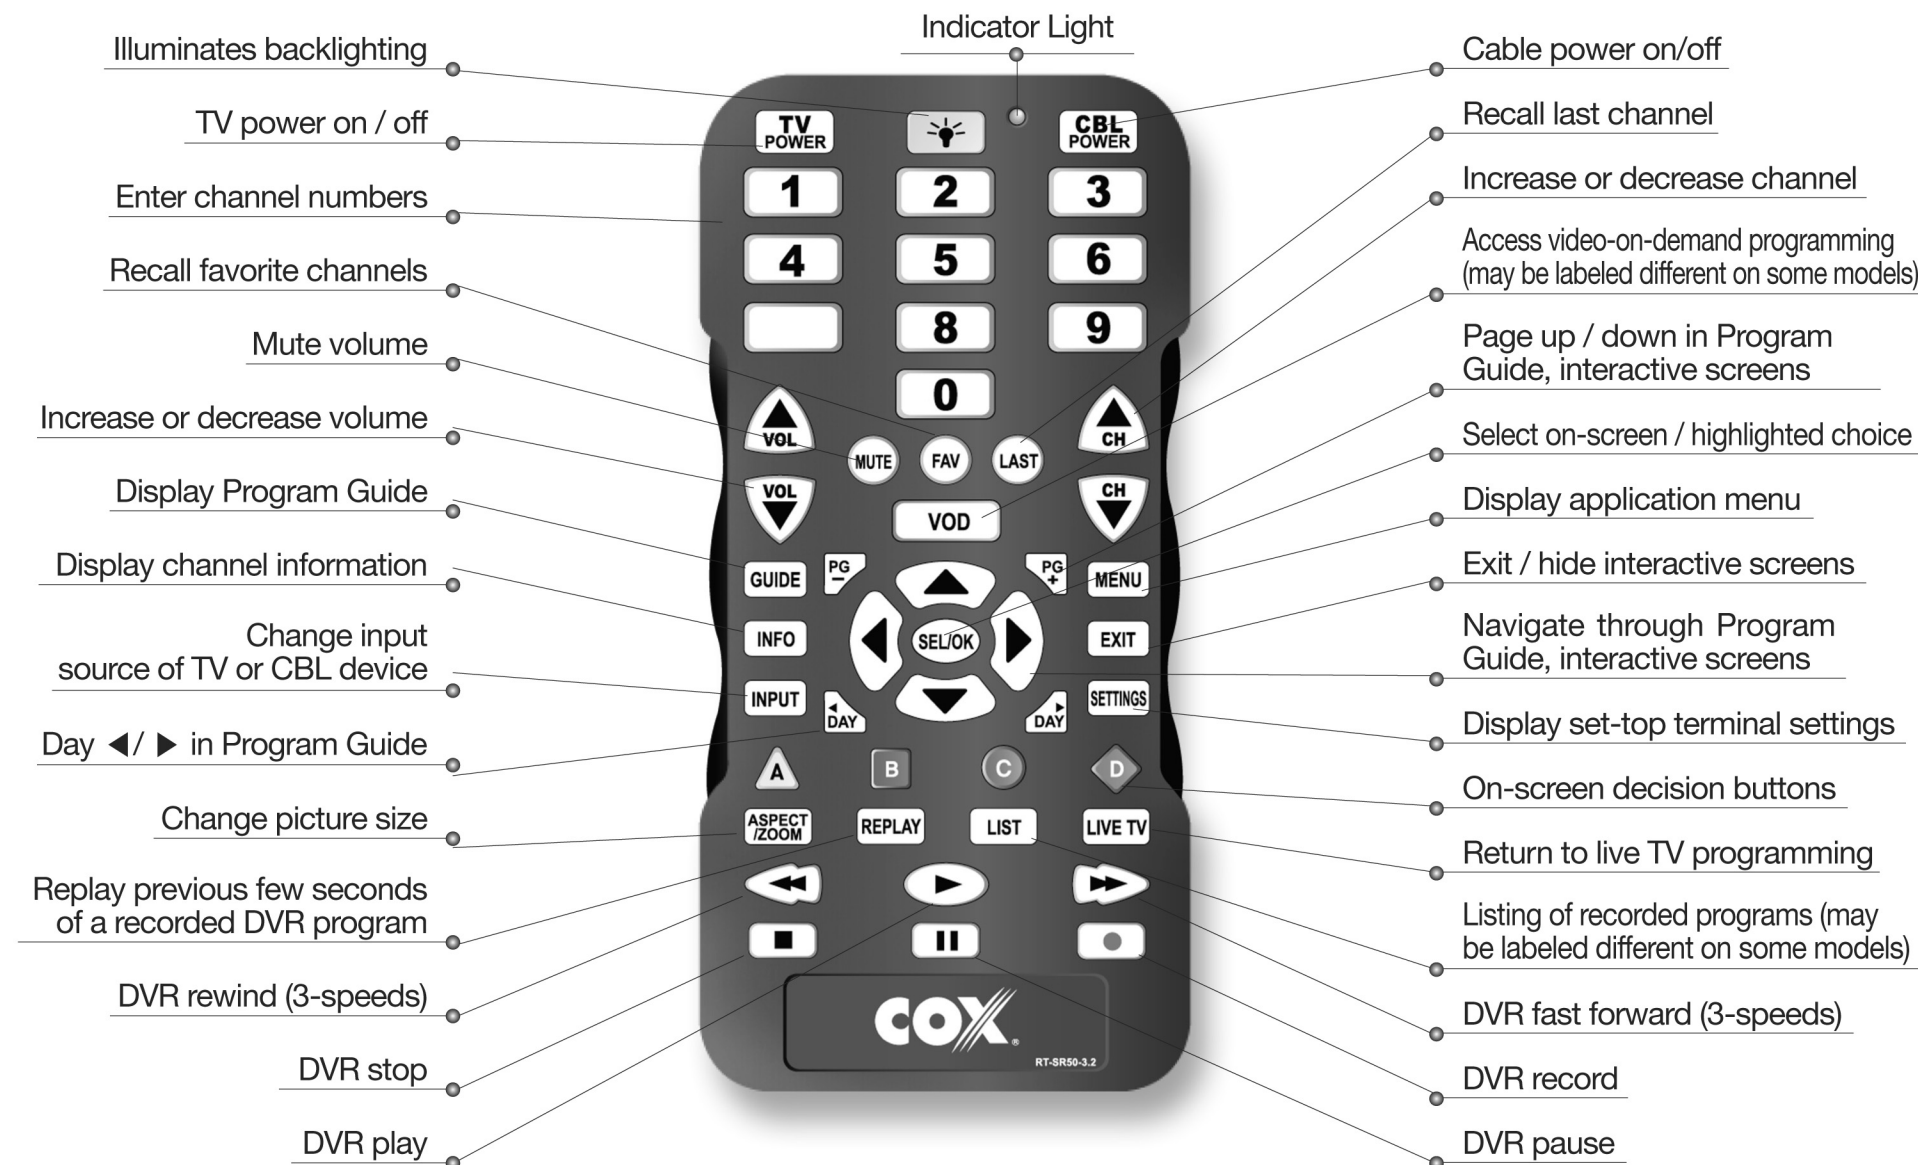

Ben Q	0454	0820							
Bradford	0168	0400							
Brilliant	0792								
Broksonic	0165	0167	0169	0423	0434	0809			
Brokwood	0073								
Candle	0068	0073	0091	0108	0385	0573	0587		
Carver	0072	0405	0729						
Celebrity	0020								
Centurion	0095	0107	0108						
Changhong	0030								
Cineral	0391	0408							
Citizen	0015	0023	0051	0068	0073	0091	0108	0168	0211
	0213	0233	0355	0385	0388	0391	0400	0573	0587
	0741								
Coby	0073	0095	0459	0462	0558	0873			
Colortyme	0730								
Clairtone	0051								
Concerto	0073	0095	0108	0573	0587				
Contec/Cony	0039	0147	0168	0233	0400	0732			
Coronado	0023								
Craig	0168	0217	0218	0220	0223	0400	0577	0786	0874
Crosley	0072	0405	0598	0729					
Crown	0023								
Curtis Mathes	0016	0023	0031	0054	0070	0072	0073	0107	0108
	0211	0213	0355	0388	0405	0462	0573	0587	0608
	0729	0736	0741	0759	0777				
Curtis	0462								
CXC	0168	0400							
Daewoo	0051	0068	0073	0095	0158	0159	0189	0191	0194
	0196	0197	0198	0200	0202	0204	0205	0206	0207
	0209	0408	0737	0741	0793				
Daytek	0583	0833	0834						
Daytron	0023	0073	0095	0107	0108	0573	0587	0741	
Dimensia	0759								
Dell	0072	0094							
Denon	0097								
Diamond Vision	0563								
Digital Lifestyles	0887								
Digital Research	0887								

Disney	0577								
Dumont	0049	0073	0108	0573	0587				
Durabrand	0157	0577	0868						
Dynex	0167	0415	0424	0567	0577	0858			
Dwin	0027								
Electro Home	0020	0044	0073	0095	0108	0403	0573	0587	0730
Electroband	0020								
Elektra	0353								
Element	0073	0459	0587	0870	0888				
Emerson	0507	0595	0016	0021	0023	0031	0047	0053	0060
	0073	0100	0103	0108	0139	0158	0159	0164	0169
	0166	0167	0168	0169	0189	0191	0211	0233	0350
	0387	0392	0395	0400	0401	0402	0403	0408	0410
	0424	0456	0567	0573	0577	0587	0590	0731	0733
	0736	0741	0743	0744	0745	0746	0748	0750	0750
	0754	0757	0760	0761	0764	0786			
Envision	0073	0095	0108	0573	0587				
ESA	0454	0456	0538						
Favi	0756								
Fisher	0104	0355	0356	0388	0736				
Fujitsu	0211	0395	0460	0469	0560	0776	0813		
Funai	0047	0048	0157	0168	0211	0395	0400		
Futuretech	0168	0400							
Gateway	0426	0533							
GE	0015	0018	0042	0044	0045	0049	0054	0055	0060
	0069	0070	0073	0090	0092	0095	0101	0102	0103
	0108	0211	0213	0389	0390	0396	0397	0403	0408
	0407	0573	0587	0739	0742	0755	0759	0806	
Gibraltar	0023	0048	0049	0053	0068	0073	0090	0095	0100
	0108	0233	0360	0361	0573	0587			
Go Video	0443	0562							
Goldstar (LG)	0023	0053	0068	0073	0090	0107	0108	0233	0360
	0361	0424	0567	0577	0587	0823	0825		
GPX	0889								
Gradiente	0104								
Grundig	0233								
Grunpy	0023	0047	0073	0095	0108	0233	0360	0361	0380
	0573	0587							
Haier	0020	0053	0073	0095	0108	0427	0519	0573	0580

	0596								
Hall Mark	0073	0095	0108	0573	0587				
Hannspree	0867								
Harley Davidson	0211								
Harman/Kardon	0729								
Harvard	0168	0400							
HCT	0868								
Hi-Sense	0072	0870							
Hitachi	0023	0039	0068	0073	0095	0096	0097	0098	0099
	0100	0108	0233	0393	0573	0587	0732	0750	0753
	0756	0787	0796	0801	0803	0808	0814	0815	0817
	0819	0821							
Hiteker	0884								
Honeywell	0886								
HP	0072								
Hyundai	0453								
iLO	0456	0470	0524	0577	0586	0602			
iSymphony	0031								
IMA	0168	0400							
Infinity	0072	0405	0729						
Initial	0470	0537							
Inkel	0364								
Insignia	0167	0169	0415	0424	0450	0456	0461	0462	0482
	0523	0524	0567	0577	0586				
Janeil	0380								
JBL	0072	0405	0729						
JCB	0020								
JC Penney	0023	0038	0039	0045	0053	0068	0073	0091	0092
	0095	0102	0108	0355	0361	0384	0385	0389	0390
	0573	0587	0739	0741	0742	0755	0759	0767	0795
JCH	0020								
Jensen	0062	0073	0108	0461	0573	0587			
JVC	0039	0045	0104	0105	0106	0233	0396	0397	0410
	0474	0589	0728	0732	0742	0753	0763	0766	0872
Kawasho	0020	0073	0095	0108	0573	0587			
Kenwood	0053	0073	0095	0108	0573	0587			
Kloss Novabeam	0071	0168	0400	0404					
KMC	0023								
Konka	0065	0445	0589						

Kosch	0462								
KTV	0023	0053	0064	0168	0233	0366	0400	0741	0770
Kurazai	0211	0213							
Legend	0169								
LG (Goldstar)	0023	0053	0068	0073	0090	0095	0107	0108	0233
	0360	0361	0384	0424	0567	0577	0587	0875	0876
Lodgenet	0211	0213							
Logik	0211	0213							
Luxman	0068	0073	0095	0108	0573	0587			
LXI	0024	0026	0027	0028	0029	0038	0055	0069	0070
	0072	0157	0355	0388	0405	0725	0729	0736	0755
	0759	0773							
MAG	0459								
Magnavox	0023	0044	0068	0071	0072	0073	0089	0090	0091
(Philips)	0092	0093	0094	0095	0108	0134	0233	0385	0387
	0390	0397	0398	0403	0404	0405	0419	0423	0426
	0447	0456	0459	0463	0470	0472	0523	0533	0549
	0594	0595	0605	0729	0740	0783	0810	0865	0877
	0878	0879							
Majestic	0211	0213							
Marantz	0053	0072	0073	0097	0098	0107	0108	0109	0405
	0573	0587	0729	0778					
	0582	0583	0585						
Matsui	0046								
Matsushita	0426	0533	0534						
Maxent	0555								
McIntosh	0555								
Megatron	0215								
MEI	0051								
Memorex	0090	0211	0213	0355	0384	0388	0405	0423	0447
	0459	0736							
MGA	0053	0068	0073	0090	0095	0104	0107	0108	0109
	0110	0216	0384	0394	0395	0398	0399	0417	0573
	0587	0739	0109	0739	0790				
Mitsubishi	0053	0068	0073	0090	0095	0104	0107	0108	0109
	0110	0216	0384	0394	0395	0398	0399	0417	0573
	0587	0739	0109	0739	0790				
Midland	0023	0045	0049	0396	0049	0741	0742	0755	
Mintek	0470								
Minutz	0102								

Montgomery Ward	0022	0023	0026	0027	0028	0029	0053	0071	0072
	0108	0211	0213						
Motorola	0026	0027	0028	0029	0044	0403			
MTC	0016	0031	0073	0102	0108	0159	0384	0385	0573
	0587								
Multitech	0168	0400							
Multivision	0738								
NAD	0023	0773	0787						
NEC	0028	0029	0044	0068	0073	0090	0108	0200	0384
	0403	0464	0573	0587	0730				
Net TV	0426	0822							
Nikko	0015	0051	0391						
Norcent	0455	0472							
NuVision	0831	0832							
NTC	0015	0051	0391						
Olevia	0073	0541	0108	0519	0587				
Onwa	0168	0400							
Optimus	0787								
Optonica	0022	0026	0027	0028	0029				
Orion	0019	0159	0160	0161	0162	0163	0382	0423	0424
	0558	0577							
Panasonic	0046	0042	0043	0044	0045	0403	0419	0423	0429
	0631	0742	0771	0829					
Penney	0016	0038	0045	0068	0073	0102	0519		
Philco	0023	0044	0053	0068	0071	0072	0073	0091	0093
	0095	0108	0233	0384	0385	0403	0404	0405	0463
	0573	0587	0729						
Philips	0023	0044	0068	0071	0072	0073	0089	0090	0091
(Magnavox)	0092	0093	0094	0095	0108	0134	0233	0385	0387
	0390	0397	0398	0403	0404	0405	0419	0423	0426
	0447	0456	0459	0463	0470	0472	0523	0533	0549
	0594	0595	0605	0729	0740	0783	0810	0865	0877
	0878	0879							
Pilot	0023	0073	0094	0108	0233	0573	0587	0741	
Pioneer	0019	0073	0100	0108	0111	0144	0383	0551	0573
	0587	0597	0747	0750	0780	0785	0787	0789	0826
	0864	0865							
Planar	0474								
Plasmasync	0778								

Polaroid Portland	0384	0394	0459	0465	0805	0811	0869		
	0015	0023	0051	0068	0073	0108	0384	0391	0573
	0587	0741							
Precision	0883								
Prima	0072	0837							
Prism	0045	0742							
ProScan	0055	0070	0073	0726	0755	0759			
Proton	0073	0090	0108	0233	0371	0372	0467	0573	0587
	0749								
Protron	0457	0467							
Proview	0459								
Pulsar	0049	0073	0108	0573	0587				
Quasar	0043	0044	0045	0046	0403	0742	0752	0770	0773
Radio Shack	0022	0023	0046	0069	0073	0108	0168	0233	0355
	0388	0400	0573	0587	0736	0741	0759		
RCA	0725	0055	0042	0044	0052	0053	0054	0068	0069
	0070	0073	0095	0100	0108	0191	0355	0384	0403
	0408	0416	0445	0573	0587	0631	0726	0750	0759
	0758	0759	0762	0765	0768	0769	0791	0880	
Realistic	0022	0023	0046	0069	0166	0168	0233	0355	0388
	0400	0736	0741	0759					
Rhapsody	0051								
Runco	0049	0525							
Sampo	0023	0073	0090	0108	0426	0533	0573	0587	0741
	0818								
Samsung	0031	0015	0016	0017	0023	0073	0090	0095	0107
	0108	0134	0147	0151	0153	0233	0384	0386	0411
	0426	0508	0533	0573	0577	0587	0741	0767	0773
	0788	0794	0800	0802	0881				
Sansei	0016								
Sansui	0169	0384	0392	0415	0423	0424	0812	0868	
Sanyo	0073	0104	0108	0353	0355	0356	0376	0377	0388
	0573	0587	0711	0735	0736	0775	0882		
Sceptre	0020	0468							
Scimitsu	0053								
Scotch	0519								
Scott	0073	0090	0108	0168	0211	0233	0395	0400	0567
	0573	0587	0743						
Sears	0023	0029	0030	0031	0038	0039	0068	0072	0095

	0104	0157	0211	0213	0353	0355	0356	0388	0399
	0405	0573	0729	0732	0736	0755	0759	0763	0773
	0792								
Seiki	0888	0889							
Semivox	0168								
Semp	0038								
Sharp	0016	0022	0023	0024	0025	0026	0027	0028	0029
	0073	0108	0233	0393	0395	0409	0573	0587	0741
	0745	0751	0779	0797					
Shogun	0073	0108	0573	0587					
Signature 2000	0023	0026	0027	0028	0029	0108	0211	0213	
Simpson	0091	0385							
Sony	0020	0014	0021	0050	0095	0178	0540	0774	0801
	0824	0827	0828	0830					
Soundesign	0073	0091	0108	0168	0211	0385	0395	0400	0573
	0587								
Soyo	0562	0601							
Squareview	0157								
SSS	0073	0108	0168	0400	0573	0587			
Starlite	0168	0400							
Sunbrite TV	0587								
Superscan	0419	0423	0484	0528					
Supre-Macy	0380								
Supreme	0020								
SV2000	0447	0595							
SVA	0592								
Sylvania	0507	0595	0047	0068	0071	0072	0073	0090	0091
	0092	0093	0095	0107	0108	0157	0158	0385	0400
	0405	0419	0423	0456	0466	0573	0587	0590	0729
	0823								
Symphonic	0047	0157	0168	0400	0456	0595	0761		
Tandy	0026	0027	0028	0029					
Tatung	0044	0403	0446						
TCL	0055	0725							
Technics	0045	0742							
Technol Ace	0211								
Techwood	0045	0068	0073	0573	0742				
Teknika	0023	0068	0072	0091	0108	0168	0213	0463	0587
	0729	0732	0741						

Telefunken	0073
Telarent	0023 0213
Tera	0381
Tevion	0065 0414
Thomson	0608 0798
TMK	0068 0073 0090 0108 0159 0519 0573 0587
Toshiba	0022 0030 0031 0038 0039 0092 0355 0388 0423 0571 0736 0755 0773 0778 0781 0799 0807
Toasonic	0051
Totevision	0233 0741
Trutech	0095 0408 0563
Trical	0021
Universal	0068 0102 0389 0390
Venturer	0073
Victor	0106 0763
Vidikron	0072 0105 0729
Videotech	0068 0073 0108 0384 0573 0587
ViewSonic	0426 0428 0455 0458 0472 0513 0515 0527 0528 0529 0530 0531 0532 0533 0534 0535 0536 0537 0538 0539 0729 0816 0885
Viking	0380
Viore	0031 0599 0601 0602 0606 0837 0840
Visco	0589
Vision Quest	0459 0729
Vizio	0095 0053 0573 0062 0073 0095 0108 0454 0538 0541 0561 0894
Vtek	0528 0530 0531 0816
V-zon	0608
Wards	0022 0068 0071 0072 0073 0090 0091 0093 0095 0102 0108 0211 0213 0384 0385 0389 0390 0395 0404 0405 0573 0587 0729 0743 0759 0761 0784
Waycon	0038
Westinghouse	0020 0458 0463 0539 0871 0889
White Westinghouse	0191 0211 0408 0449
XR-1000	0213
Yamaha	0068 0073 0108 0384 0573 0587
York	0090 0108
Zenith	0047 0048 0049 0050 0051 0073 0095 0097 0108 0191 0213 0331 0391 0405 0406 0408 0434 0567