



Connect **COLOR CODED** cable ends to your LARGE Contour® Box

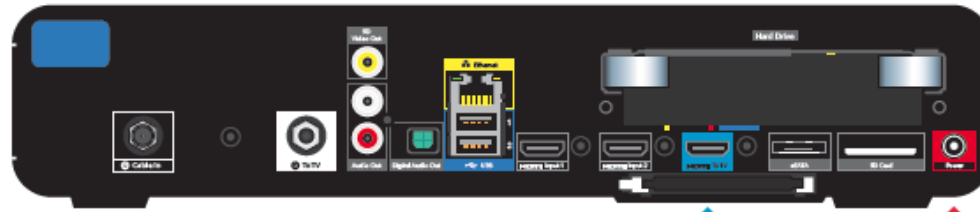


1

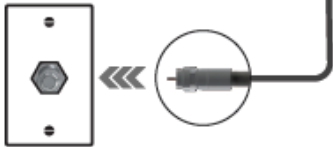

Connect **CABLE 1** to cable outlet on wall


2



Connect **CABLE 2** to desired **HDMI** port on TV
If your TV does not have an HDMI port, visit cox.com/activate


3

IMPORTANT
Connect power **AFTER** **CABLE 1** is connected

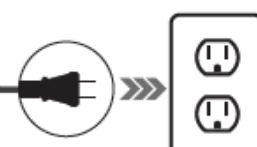


Connect **POWER CORD** to power outlet on wall


4



TURN ON CONTOUR BOX + TV
Select HDMI connection used in Step 2 by pressing "Input" or "Source" button on TV remote



ACTIVATE CONTOUR BOX
Follow on-screen instructions to activate box



PAIR YOUR REMOTE
Remove battery pull tab; hold "Setup" button for 3 seconds, then press "Contour" button


5

Troubleshoot


Not seeing a picture?
Ensure TV "Input" or "Source" is set to HDMI connection used in Step 2

Not seeing all your cable channels?
Make sure Cable 1 is connected to wall outlet and correct connector on Contour box, then call 1-888-556-1193 from a phone number associated with your account to activate the box

Conecta los cables CODIFICADOS POR COLOR a tu caja de Contour® grande

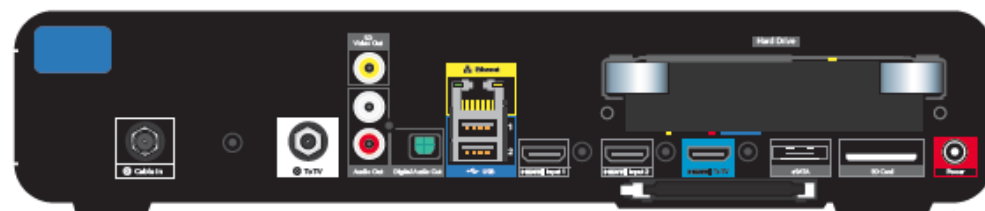

1

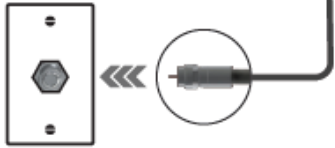

Conecta el **CABLE 1** a la toma de cable en la pared


2



Conecta el **CABLE 2** al puerto HDMI deseado en la TV
Si tu TV no tiene puertos HDMI, visita cox.com/activate


3

IMPORTANTE
Conecta a la corriente **DESPUÉS** de conectar el **CABLE 1**




Conecta el **CABLE DE CORRIENTE** a la toma de corriente en la pared


4



ENCIENDE LA CAJA DE CONTOUR + TV
Selecciona la conexión HDMI utilizada en paso 2 presionando botón de "Input" o "Source" en el control remoto de la TV



ACTIVA LA CAJA DE CONTOUR
Sigue las instrucciones en la pantalla para activar la caja



EMPAREJA TU CONTROL
Quita la lengüeta de la batería, mantén presionado "Setup" por 3 segundos, después presiona el botón de "Contour"

5

Solución a problemas

¿No se ve una imagen?
Asegúrate de que en tu TV "Input" o "Source" estén en el puerto HDMI seleccionado en el paso 2

¿No se ven todos los canales?
Asegúrate de que el Cable 1 esté conectado a la terminal de la pared y a la entrada correcta en la caja de Contour, después llama al 1-888-556-1193 desde un teléfono asociado a tu cuenta para activar la caja