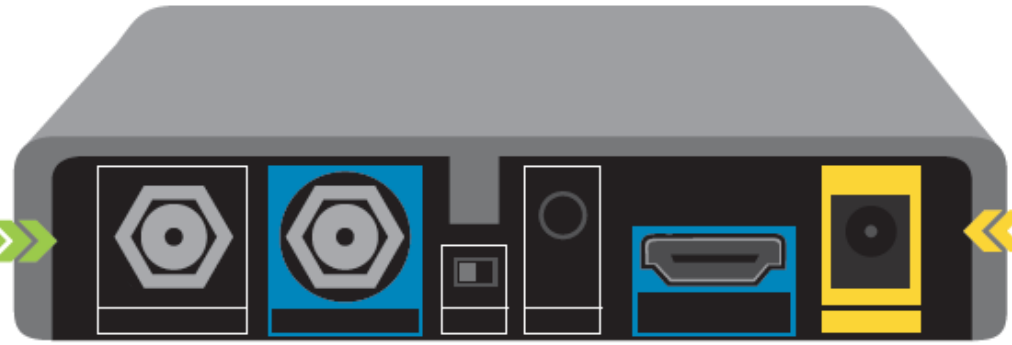

1

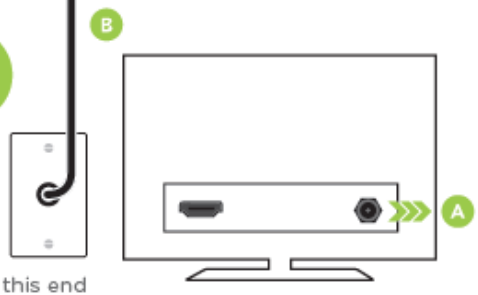

Leave this end of COAX CABLE connected to wall.

A Turn off TV. Disconnect **CABLE** from **TV**

B Reconnect **CABLE** to **MINI BOX**

2

For HDTV

Connect **HDMI CABLE** to **HDMI PORT on TV**

FOR OLDER TVs (non-HDTVs), use the cable in the blue bag and refer to page 8 in the Easy Setup Guide

3

IMPORTANT

CONNECT POWER LAST

Connect **POWER CORD** to wall **OUTLET**

4

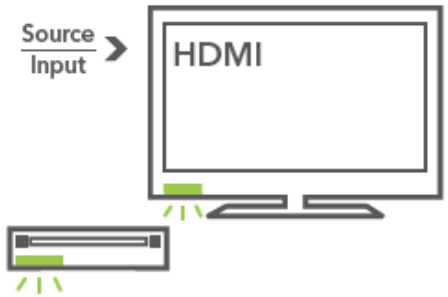

Turn on TV

Select **HDMI** by pressing "Input" or "Source" button on TV or TV remote until you see a picture

FOR OLDER TVs (non-HDTVs), tune TV to channel 3 or 4

The mini box will automatically load

This may take 10 minutes