

(Instructions for Modem Swaps)


1

Start by letting us know that you are ready to swap your modem

Visit www.cox.com/swap
to start your swap

2

Disconnect the cables from your OLD MODEM



3

Connect **CABLE 1**
to **CABLE OUTLET**



Cable
from Wall




Power

4

CONNECT POWER LAST

Connect **POWER CABLE**
to **POWER OUTLET**

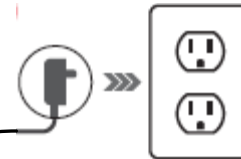


5



WAIT
10 MINS

Your modem may reboot multiple times and will be ready when Internet and WiFi lights are solid. This may take up to 10 MINUTES.

6

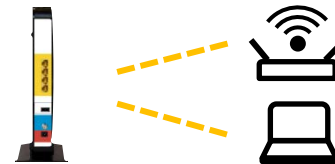

Connect your cable modem to your computer or wireless router using the **YELLOW CABLE** and then turn on the device.

?

Any questions about your installation?
We are here to help! Call us anytime.



1-888-556-1193



Instrucciones en
Español a la vuelta